


STINGER
TACTICAL INNOVATIONS

**MINIMALIST
HOLSTER**

WITH LASER SIGHT

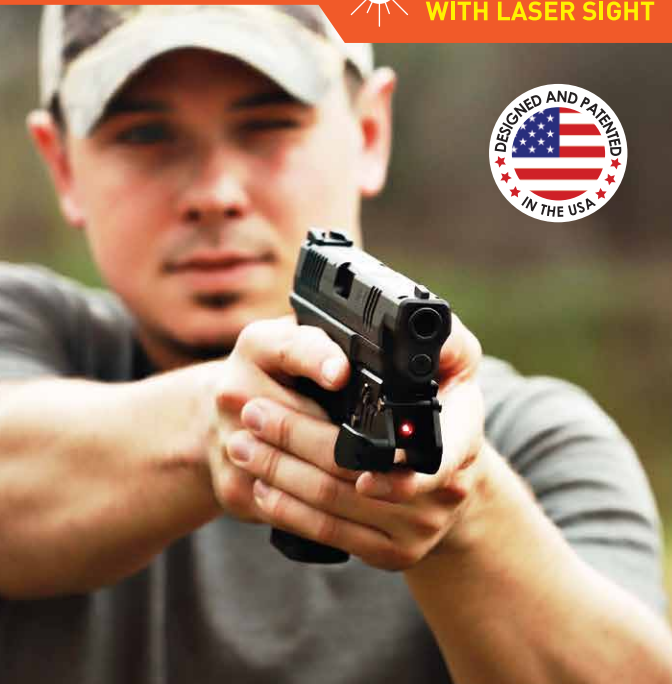

TheStingerTools.com |



@stingertools

PLEASE READ THE ENTIRE MANUAL

Failure to follow these instructions and procedures may result in injury or death.

- > Always follow firearm safety rules as outlined by the firearms manufacturer.
- > Do not point the laser beam at eyes. This could result in permanent eye damage.
- > Keep this and all firearm related products locked and secured from children or other unauthorized users.

FAILURE TO FOLLOW ANY OF THE FOLLOWING WARNINGS MAY RESULT IN SEVERE INJURY OR DEATH TO YOU OR OTHERS.

Prior to installing products, ensure that the firearm is unloaded, the magazine is removed, safety on and finger(s) off the trigger.

DO NOT install or use product if the installation of the product in any way affects the safe function of the firearm. If, while installing products, you have any trouble with the fit or functionality of the firearm, STOP IMMEDIATELY.

ALWAYS FOLLOW THE 4 RULES OF FIREARM SAFETY:

1. Handle all firearms as if they are loaded.
2. Never let the muzzle cover anything that you are not willing to destroy.
3. Keep your finger off the trigger until your sights are on the target and you are ready to fire.
4. Be sure of your target and what is beyond.

Remember, the user is ALWAYS responsible for the safe use of a firearm!

We recommends that every gun owner take a gun safety course from a certified NRA Instructor before handling or firing your firearm.



FAILURE TO FOLLOW ANY OF THE FOLLOWING WARNINGS MAY RESULT IN SEVERE INJURY

PRODUCT SPECIFICATIONS

Laser Wavelength	650 nM
Output Power	2~4 mW
Operating Voltage	3~5 [V]DC
Laser Level	IIIa
Working Current	<25 mA
Tube Diameter	<10-15mm (on 6 meter)
Operation Temperature	-10 to 50°C
Storage Temperature	-20 to 50°C



IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE INCLUDED SAFETY LABEL APPLIED

QUICK START GUIDE

2x LR44
Batteries



1. INSTALL THE BATTERIES

Locate the battery compartment door under the laser unit, loosen battery cap with tool. Insert 2 button cell (LR44) Alkaline Batteries.

* DO preserve battery life by switching off a device and removing the batteries when it's not being used, and is not expected to be used for extended periods of time.

2. TURN ON

CAUTION: Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.



3. ADJUSTMENTS

Stinger laser sights are fully adjustable for windage and elevation if further adjustments are desired. A two-screw alignment system is used to adjust for windage and elevation. Use the supplied allen wrenches to make any adjustments.



For more info, visit www.TheStingerTools.com



**TRIGGER ON
LASER ON**



**TRIGGER OFF
LASER OFF**

Before use the product, please visit
www.TheStingerTools.com
for installation video



Scan for
installation
Video

RESET BUTTON
Push Down and
Reset Trigger Cover

